


#24906 ICG 50' Welded Side Boxcar

Qty.	Part#	Description	Price
2	T032	Sides, panel door, welded	\$1.50
3	T027A	End blocks	0.25
1	T028A	Roof, P-S	1.00
2	T020	Ends, Youngtown	1.00
2	T015	Ladders, four rung	0.35
2	T033	Ladders, seven rung	0.50
2	T005	Destination boards	0.05
8	N381S	Grab irons	0.10
1	L116	Ajax brake housing	0.09
1	L115	Brake wheel w/ lever	0.15
2	T035	Brake platform, short	0.10
1	L021	Brake pulley	0.25
1	T031	Floor	1.00
1	L019	Reservoir	0.12
1	L018	Cylinder	0.15
1	L020	AB Valve	0.08
1	T009	1" piping	0.10
2	T012	1 5/8" piping	0.10
1	N003	3/64" x 3/64" stripwood	0.06
2	T014	Bolster, AF	0.10
2	A062	Bolster, Ace	0.75
2	T005	Converted Kadee couplers	1.10
2	A202	Scale trucks, Bettendorf	2.95
2	A203	Highrail trucks, Bettendorf	2.95
2	PA12A051	American Flyer trucks	4.00
2	D002	ACI labels	0.10
1	H006	ICG decals	1.55
1	M24906	Instruction booklet	1.00

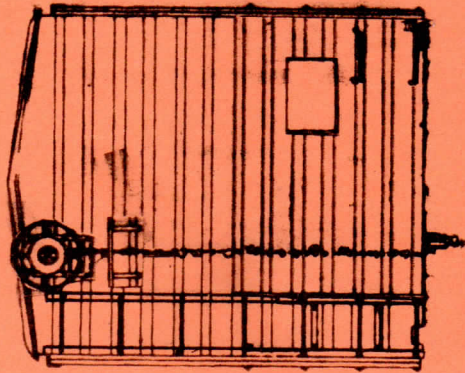

PAINTING INSTRUCTIONS- The styrene cast parts have been given a thin coat of primer. If you use lacquer paints (Floquil or Scalecoat) prepare the sides first with barrier coat. Use thin layers of paint to get the most detail.

DECAL INFORMATION- All surfaces should have a gloss finish. Use solvaset diluted 1:1 with water for these decals. Add a drop of liquid detergent (lux, etc.) to the decal soaking water.

