


NOTE: THESE INSTRUCTIONS APPLY JUST AFTER THE ASSEMBLY OF THE BASIC BOX BODY AND JUST BEFORE THE APPLICATION OF THE SIDES.

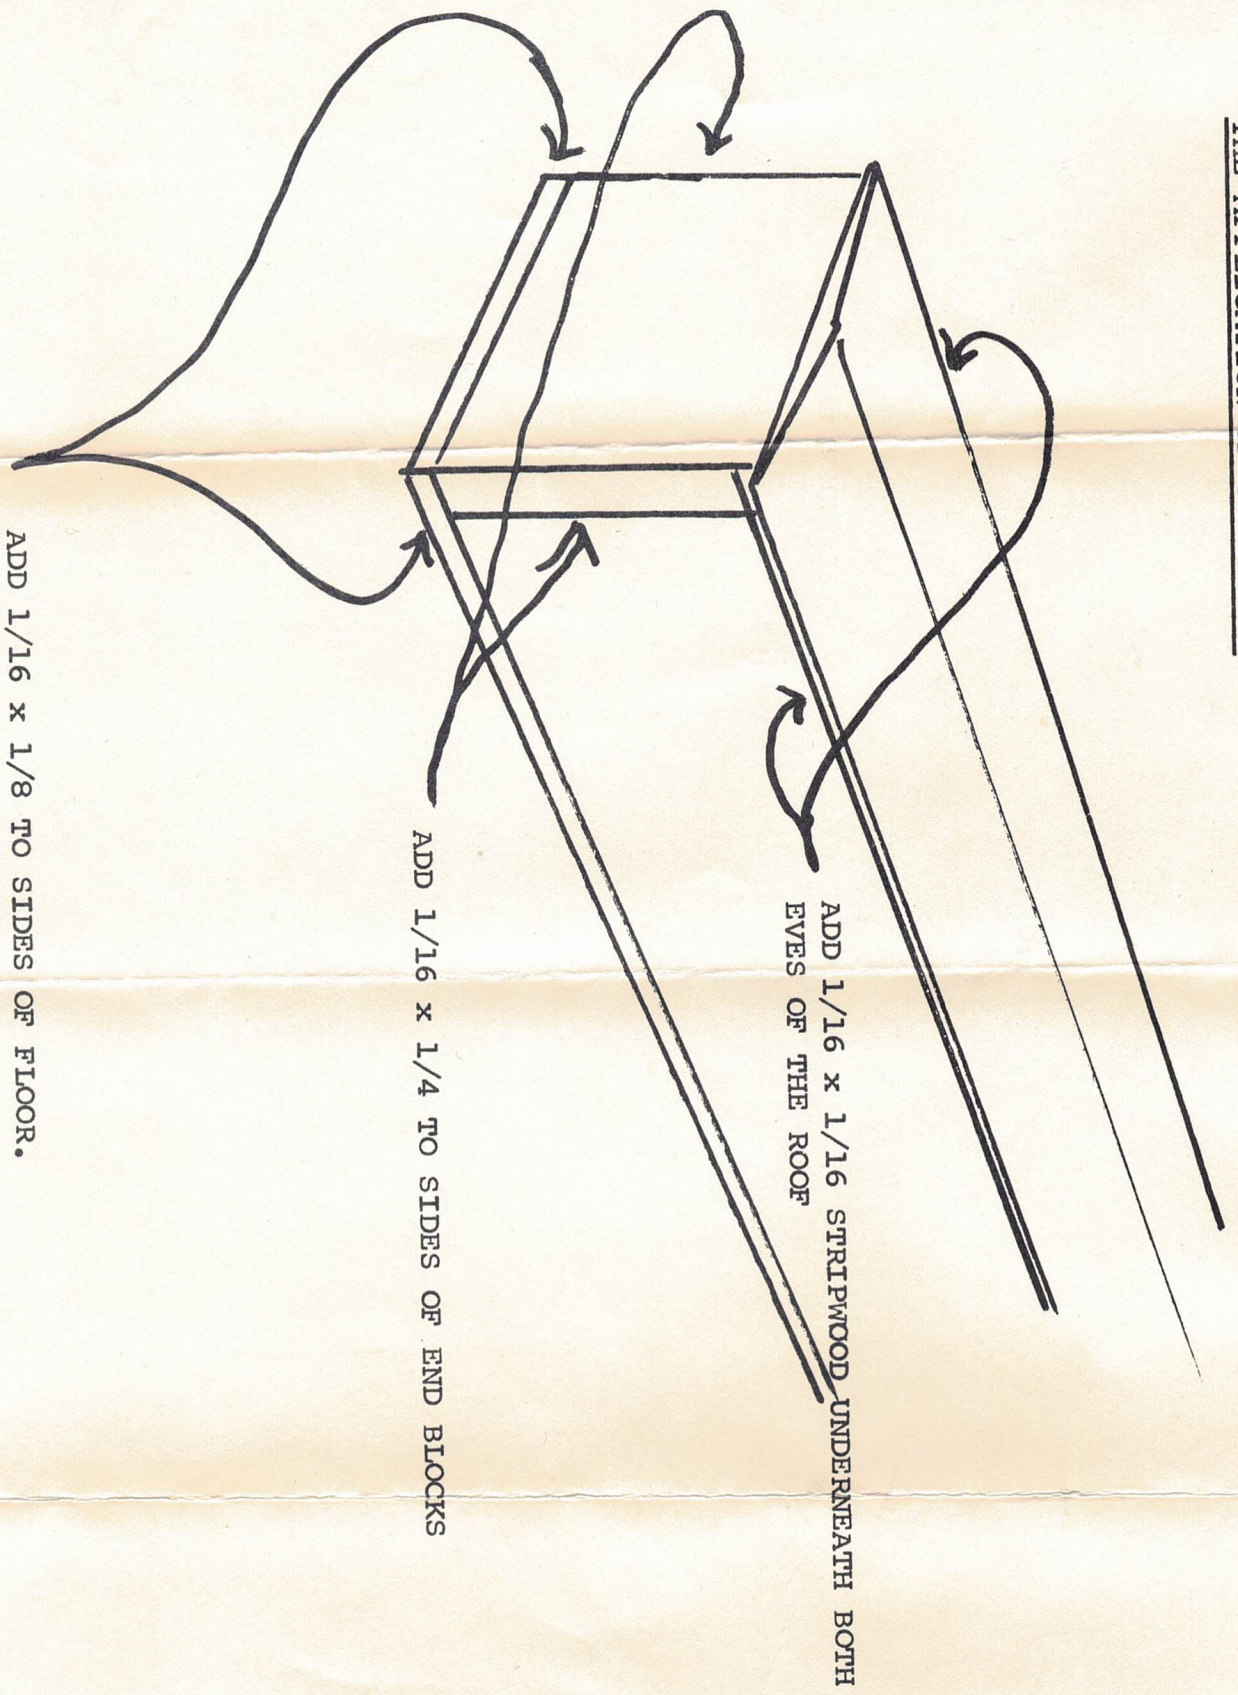

ADD 1/16 x 1/8 TO SIDES OF FLOOR.

ADD 1/16 x 1/4 TO SIDES OF END BLOCKS

ADD 1/16 x 1/16 STRIPWOOD UNDERNEATH BOTH EAVES OF THE ROOF

THESE ADDITIONAL INSTRUCTIONS ARE FURNISHED IN ORDER THAT YOU COMPLETE THE KIT WITH THE PROPER WIDTH. WE HAVE CHANGED THE KIT TO INCORPORATE ALL BASSWOOD PARTS: CONSEQUENTLY IT IS NECESSARY TO MAKE THESE REVISIONS OR YOUR KIT WILL NOT BE OF PROPER WIDTH.....